



RF Components

Wideband Variable Gain Amplifier


5-18 GHz

Model Number:
A-VGAKX-310015

- 0-26dB Gain Range
- External DC power
- TTL/SPI control
- DIP switch control option also available (please enquire)

Available with RF connector options:

- 50 Ω 2.92mm

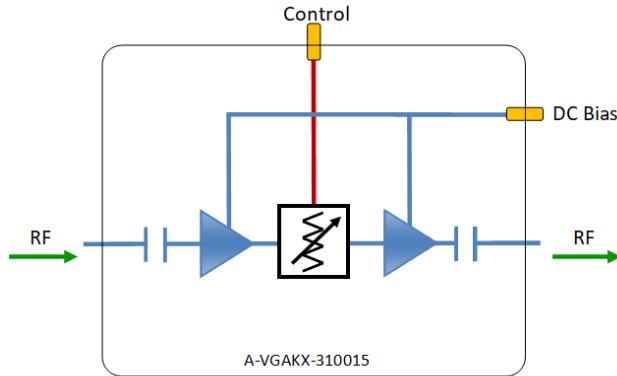

Compact
Housed in rugged compact enclosure

5-18 GHz
Operating frequency range.

12-24 V
External DC powering

RF Parameters		
A-VGAKX-310015-XXXX		K5K5
Frequency Range		5 - 18GHz
Gain (dB)		0 - 26
Gain Flatness (\pm dB)	Full band	2.0
	Any 36MHz	0.2
Gain Step Size (dB)		0.5
Return Loss (dB)	Typ	14
	Min	10
Output P1dB GCP** (dBm)	Typ	23
	Min	18
OIP 3 (dBm)	Typ	33
	Min	28
Noise Figure* (dB)	Typ	3.5
	Max	4.5

* Noise figure at max gain and 18°C
**Gain Compression Point at max gain

Broadcast



Marine Oil & Gas



SNG & VSAT



Satellite Teleport





RF Components

Technical specifications and operating parameters


Environmental		
Operating Temperature		-20°C to +65°C
Storage Temperature		-20°C to +65°C
Location		Indoor use Only
Humidity	Max	85% non-condensing
Altitude	Max	10,000 feet

Interface	
RF Connectors	50Ω 2.92mm Female
DC/Comms Connector	15W Micro-D Plug
Mounting	4 x M2 tapped holes

Max Operating Parameters	
Input RF Power	-10dBm
DC Voltage	12 – 24V
DC Current	N/A
DC Consumption	250 mA

! Operation beyond these limits may cause instantaneous and permanent damage.

Physical Dimensions (mm)

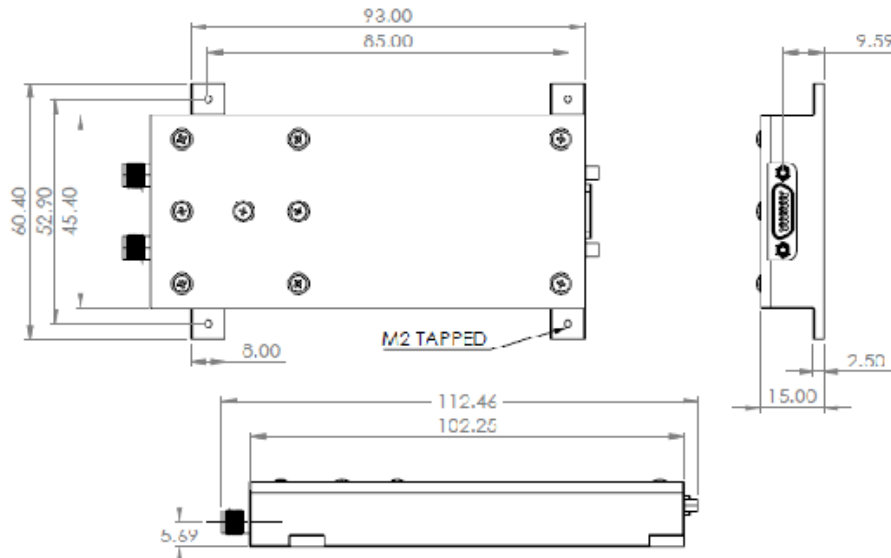

Broadcast



Marine Oil & Gas




SNG & VSAT



Satellite Teleport



Connector pin-out and control information

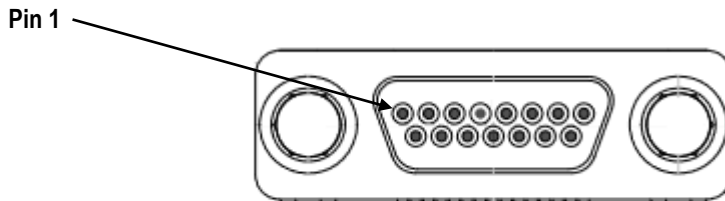

Pin Descriptions		
Pin Number	Function	Description
1	0.5dB bit	Pins are internally pulled up to 3V3, connect each pin to ground to activate the attenuator bits. Leave all pins open/pulled high for max gain. 32dB bit pin only applicable on units with >30dB attenuation range. Must be left unconnected otherwise.
2	1dB bit	
3	2dB bit	
4	4dB bit	
5	8dB bit	
6	16dB bit	
7	32dB bit or N/C	
8	Alarm	Open-drain alarm. Pin is internally shorted to ground when an internal fault is detected. 250mA max current sink to this pin.
9	Serial +	Serial data +ve pin (RS-485/422).
10	GND	Must be connected to DC ground.
11	Serial -	Serial data -ve pin (RS-485/422).
12	N/C	Must be left unconnected.
13	GND	Must be connected to DC ground.
14	+V in	Supply voltage (12-24V DC).
15	+V in	Supply voltage (12-24V DC).

! When using serial control to set the gain, all parallel control pins (pins 1-7) must be left unconnected or pulled high. If one of these pins is connected to ground then it will overwrite the last serial command setting. The parallel pins must all be set to N/C or pulled high again before another serial command can be sent.

Broadcast



Marine Oil & Gas



SNG & VSAT



Satellite Teleport

